


Resistance Thermometre Information



Local regulations may restrict the use of this product to below the conditions quoted. In the interests of development and improvement of the product, we reserve the right to change the specification without notice.

© Copyright 2024

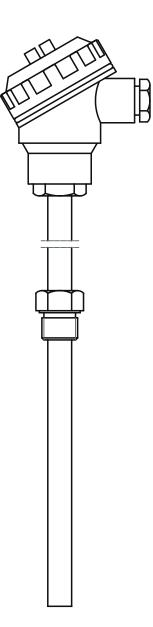



Rezistance Thermometer Information

Resistance Thermometer:

Resistance thermometer is a temperature sensor obtained by changing the resistance value of a conductive wire depending on the temperature. It is widely used in industry and laboratory applications found after thermocouple. They give more accurate values than thermocouples, especially at low temperatures and in the processes where precise measurement is desired. The value of the winding resistance changes depending on the temperature change. A varying voltage is obtained with the constant current applied on it.

There are some things to consider for resistance thermometers. The first of these is that the current applied on it causes a small temperature change. Another important element is the resistance of the wires carrying the current. In resistance thermometers, the temperature change factor is defined by "a". Temperature changes and values are formulated as follows.

a: Resistance thermometer temperature change factor

R_o: Resistance value at 0° C

R.: Resistance value at 100 °C

$$\alpha = \frac{R_{100} - R_0}{R_0 * 100 °C}$$

Resistance thermometer temperature-resistance change values comply with DIN43760 and IEC751 standards. Pt-100 and Ni-1000 resist 100 Ohms at 0°C with a tolerance of \pm 0 Ohm. Temperature-resistance change values are calculated with the following formula.

$$Rt = R (1 + At + Bt)$$

Rt= Resistance value at any temperature T

R= Resistance value at 0°C

t = Temperature


 $A = 0390784 \times 10^{-2} \text{C}^{-3} \text{(Constant)}$

 $B = 0.578408 \times 10^{-6} \text{C}^{-2} \text{(Constant)}$

Theree important points should be taken into consideration in the use of resistance thermometers.

- 1- Environmental Conditions,
- 2- Maximum and minimum operating temperatures,
- 3- Tolerance values



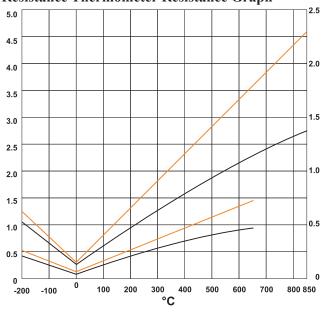

Resistance Thermometer Tolerance Table

Temperature	Temperature IEC 751:1983 (BS EN 60751:1996)						
,Co	AC	Class	E Class				
	±°C	±OHM	±°C	±OHM			
-200	0.55	0.24	1.3	0.56			
-100	0.35	0.14	0.8	0.32			
0	0.15	0.06	0.3	0.12			
100	0.35	0.13	0.8	0.30			
200	0.55	0.20	1.3	0.48			
300	0.75	0.27	1.8	0.64			
400	0.95	0.33	2.3	0.79			
500	1.15	0.38	2.8	0.93			
600	1.35	0.43	3.3	1.06			
650	1.45	0.46	3.6	1.13			
700	-	-	3.8	1.17			
800	-	-	4.3	1.28			
850	-	-	4.6	1.34			



When looking at resistance changes related to temperature, Platinum and Nickel wire gave the best performance among many alloys and metals. For this reason, resistors wrapped from these wires are used in Pt-100 and Ni-100s. It is best to use Pt-100 in this area.

For Platinum $a=3,85.^{-3}10$ (1/°C) For Nickel $a=6,17.^{-3}10$ (1/°C)

Looking at the resistance thermometer structure, it consists of inset, outer protective sheath and other connection parts. Resistance thermometer element that measures the temperature is placed in the inset with outer protection. Metal oxide powders are filled in the sheath. A single piece of wire is used between the terminal element and the terminal and this wire is insulated with insulators.

In standard production, the inset diameters are 6mm or 8mm, the resistance thermometer element in the sheath is defined as inset with its connection terminal. Inset is mounted in outer protective sheath. With this structure, the inset resistance thermometer in the outer protective sheath can be removed more easily without removing the outer protective sheath from the process. If the resistance thermometer element in the inset is to be connected to a single device, it is produced as a single element, but if it is to be connected to a second device, then it is produced as double element.

Resistant Thermometer Element:

The resistance thermometer element consists of placing the resistance wrapped in Platinum or Nickel wire in Ceramic, Glass or Mica.

Platinum resistance thermometer elements are used from -200 °C to +850 °C. Nickel wire resistance thermometer elements are used from -60°C to +150 °C. Pt-100 element is widely used because it gives constant temperature and more accurate values. They are also more readily available. For this reason, Pt-100 is preferred even in processes suitable for Ni-100 ranges.

The resistance thermometer element placed at the tip in the inset is connected to the terminal with Copper (Cu), Silver (Ag) or Nickel chrome (NiCr) wires. If Copper and Silver are chosen, these wires are ignored because their resistance is very low. Nickel chrome wire is used as internal connection wire in applications above 600° C. Since the resistance of nickel chrome wire is high, the resistance of this wire is measured and written into the head-terminal block.



	Tolerance									
Temp. °C	Class B		Class A		1/3 DIN *		1/5 DIN *		1/10 DIN *	
	±°C	±Ohms	±°C	± ohms	±°C	±ohms	±°C	± ohms	±°C	± ohms
-200	1.30	0.56	0.55	0.24	0.44	0.19	0.26	0.11	0.16	0.06
-100	0.80	0.32	0.35	0.14	0.27	0.11	0.16	0.06	0.08	0.03
0	0.30	0.12	0.15	0.06	0.10	0.04	0.06	0.02	0.03	0.01
100	0.80	0.30	0.35	0.13	0.27	0.11	0.16	0.05	0.08	0.03
200	1.30	0.48	0.55	0.20	0.44	0.16	0.25	0.10	0.13	0.05
300	1.80	0.64	0.75	0.27	0.60	0.21	0.36	0.13	-	-
400	2.30	0.79	0.95	0.33	0.77	0.26	-	-	-	-
500	2.80	0.93	1.15	0.38	-	-	-	-	-	-
600	3.30	1.06	1.35	0.43	-	-	-	-	-	-
650	3.60	1.13	1.45	0.46	-	-	-	-	-	-
700	3.80	1.17	-	-	-	- 1	-	-	-	-
800	4.30	1.28	-	- 1	-	- 1	-	- 1	-	-
850	4.60	1.34	-		-	-	-	-	-	-

The nominal resistance measurement point is determined at a distance of 8 mm from the end of the sensors body

Feature DIN EN 60751 (According IEC 751)

Thin Film Element Features

Temperature Range -70 ° to +500 °C

(Continuous Usage) (It is possible to use it temporarily

at 550 °C)

Tolerance Class B: -70 °C to +550 °C Tolerance Class A: -50 ° to +300 °C Tolerance Class 1/3 Din: 0° to +150 °C

Resistance Thermometer Inset

The resistance thermometer element is not mounted directly on the outer protective sheath. It is placed in a smaller diameter metal sheath and identified as an inset. The inset is placed in the outer protective sheath in a separate metal sheath as the second sheath. In this way, when the resistance thermometer element is damaged, the inset can be changed easily from inside the head without stopping the process and without removing the outer sheath. In this way, if there is an outer sheath and a head available, a more economical product is obtained by only providing inset without the connection parts.

Protective Sheath:


In resistance thermometers, the size, diameter and type of the protective sheaths are selected depending on the process conditions. Inset sheaths are selected from 304 or 316 material. Selection of outer protective sheath should be chosen from different materials for each process. For this reason, please check the "Thermocouple Protective Sheath Selection" table in the thermocouple general information section for the selection of protective sheaths.

Chemical abrasions and mechanical abrasions in the process should be taken into consideration in the selection of protective sheaths. For an accurate temperature measurement in resistance thermometers, a minimum of 6 and a maximum of 15 times the outer diameters should be immersed in the process. In this way, the farthest element will enter the environment at a sufficient rate and will make the correct measurement. Resistance thermometers should be placed in the flow direction of the fluid in flowing processes.

Connection Cables:

Copper conductive cables are used between the device and the resistance thermometer in applications of resistance thermometers. Cables with 1.5mm2 cross-section are preferred. Cable resistance will also have an effect on the measurement value. For this reason, in standard cable connections, a 2-wire cable is used for a distance of up to 10 m, a 3-wire cable for a distance of up to 150m, and a 4-wire cable for distances of more than 150m. In addition, the resistance / current converter method is often used for long distances.



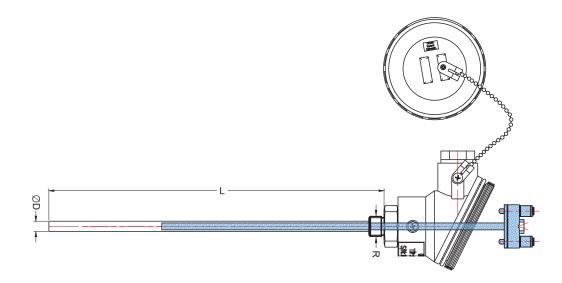

Resistance Thermometer Resistance Table					(DIN 43760 ve IEC 751 Standard)					
°C	0	-10	-20	-30	-40	-50	-60	-70	-80	-90
-200	18,51	-	-	-	-	-	-	-	-	-
-100	60,27	56,18	52,11	48,01	43,86	39,73	35,55	31,34	27,11	22,82
0	100,00	96,10	92,17	88,22	84,28	80,32	76,31	72,32	68,32	64,31
°C	0	10	20	30	40	50	60	70	80	90
0	100,00	103,90	107,80	111,66	115,53	119,41	123,23	127,07	130,91	134,72
100	138,52	142,30	146,08	149,82	153,57	157,32	161,06	164,78	168,48	172,17
200	175,86	179,54	183,20	186,85	190,47	194,11	197,71	201,32	204,90	208,48
300	212,04	215,61	219,16	222,69	226,22	229,72	233,23	236,71	240,19	243,65
400	247,09	250,53	253,96	257,37	260,77	264,17	267,56	270,93	274,29	277,65
500	280,98	284,30	287,62	290,92	294,21	297,48	300,75	304,02	307,25	310,50
600	313,71	316,92	320,12	323,30	326,48	329,64	332,79	335,93	339,06	342,18
700	345,28	348,38	351,46	354,53	357,59	360,64	363,67	366,70	369,71	372,71
800	375,70	378,78	381,65	384,60	38,55	390,48	-	-	-	-

Note: Resistance values of different resistance thermometer elements are obtained by multiplying the resistance values of the Pt- 100 element by certain coefficients.

Sample; $Pt-50 = Pt-100 \times 1/2 \text{ equals.} - Pt-500 = Pt-100 \times \text{ equals.} - Pt-1000 = Pt-100 \times 10 \text{ equals.}$